




1: Unclip the black shroud and lens using a screwdriver to gently prise the clips.




2: Remove the needle pointers. Gently twist anti-clockwise and pull upwards as you do.




3: From behind, remove the screws to release the front digital display.

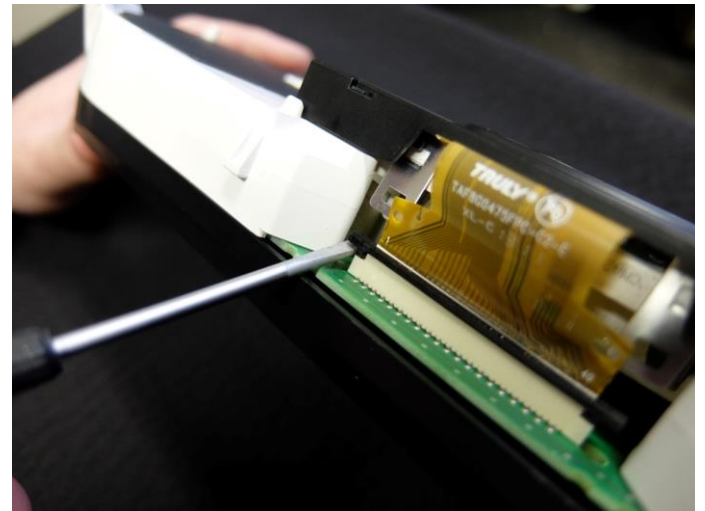


4: Gently ease up the data ribbon connector at both ends and release the ribbon.

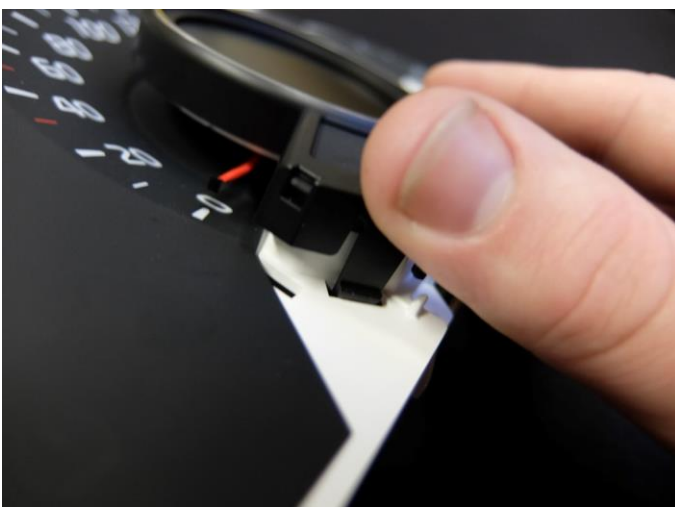

5: Squeeze clips in to lift up the digital display.

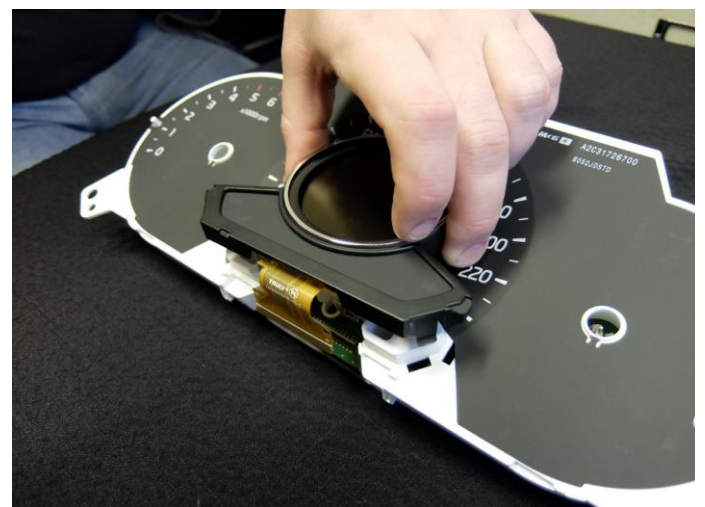


6: Ease the digital display up and off.

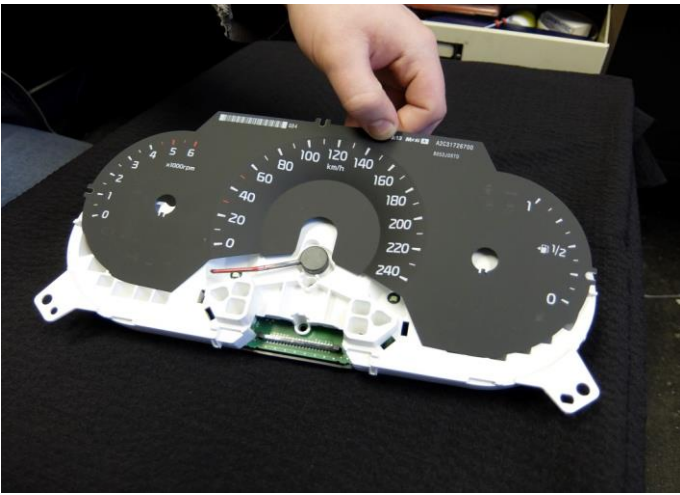

7: Remove the dial facia.




8: Peel the paper off the adhesive squares.

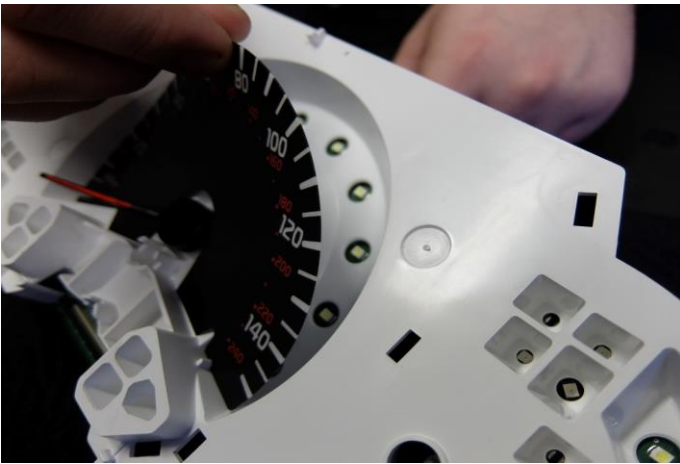


9: Enter the new dial into the recess.



10: Stick down the new speedo dial.

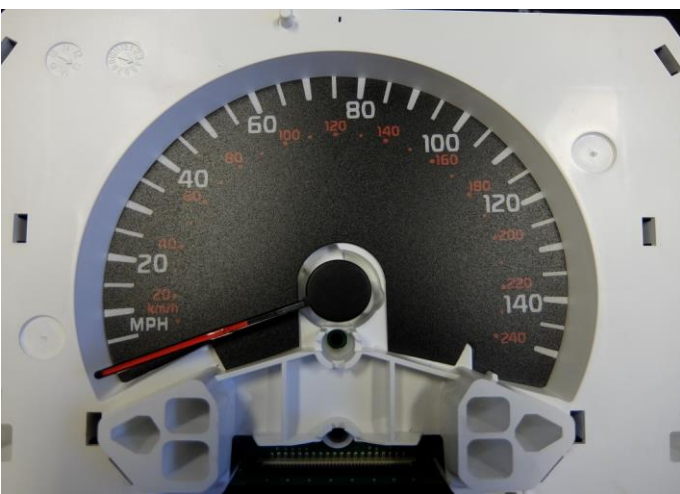

11: New speedo dial in position.

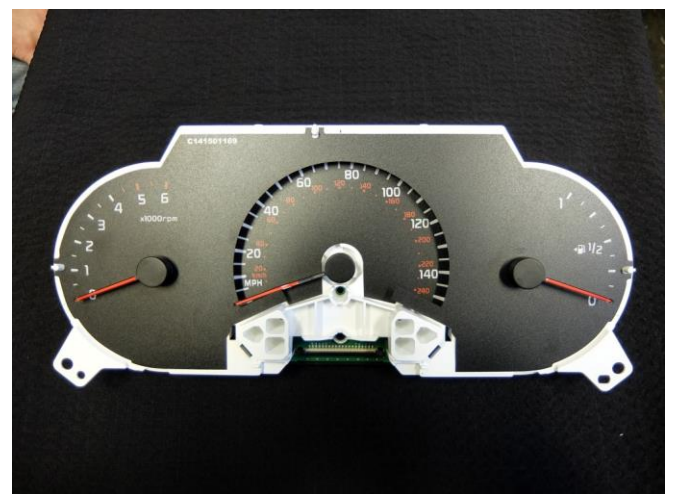

12: Fit the top dial and needle pointers.






13: Refit the digital display (see Step 14 too).



14: When refitting the digital display make sure the 'floating legs' are pressed down as shown.

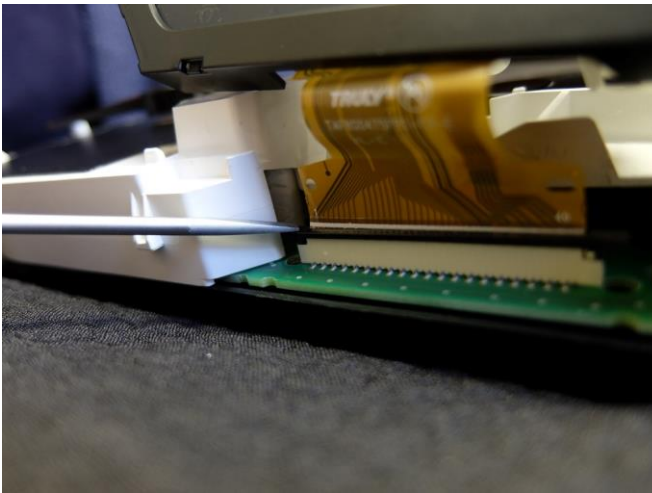

15: Gently reconnect the data ribbon and push the clip down.

16: Refit the shroud and lens. This is simply step 1 reversed. Ensure it is properly clipped into place.



Dials Fitted