


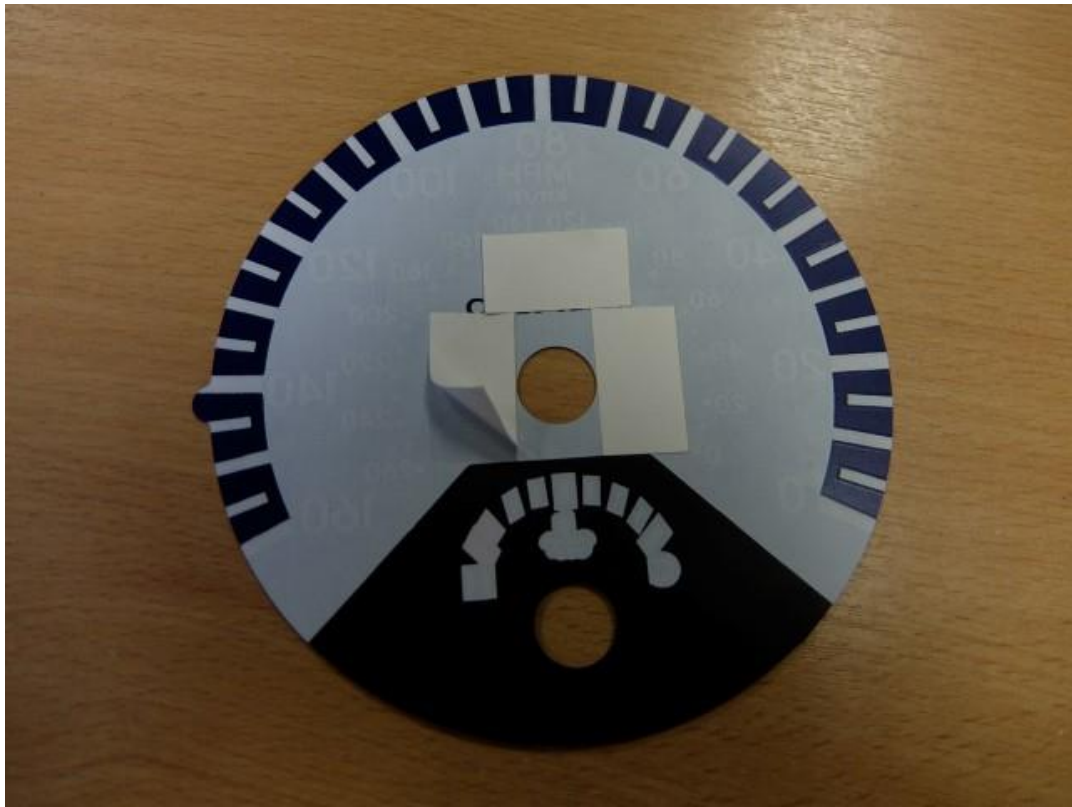

1: Remove the adhesive backing from your replacement dial.



2: Remove the old dial face and stick the new dial face in. Then place the outer ring on top (the same applies to the rev. counter).



3: Dials fitted in the instrument cluster