

C1044 TOYOTA CAMRY DIAL FITTING INSTRUCTIONS




REMOVE FRONT COVER BY RELEASING CLIPS




EXPOSED DIAL FACE




REMOVE SCREW

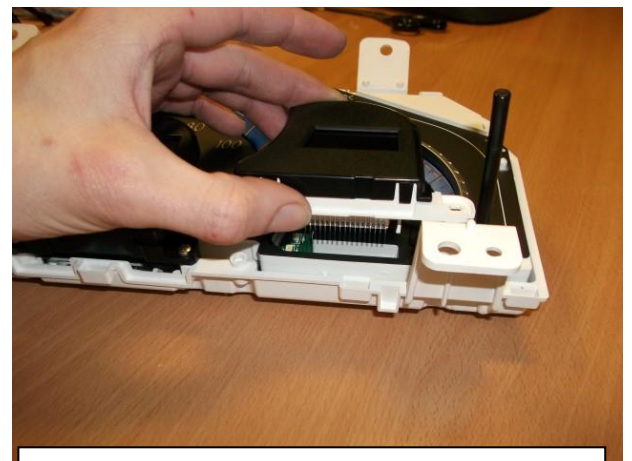

CAREFULLY REMOVE DIGITAL SCREEN

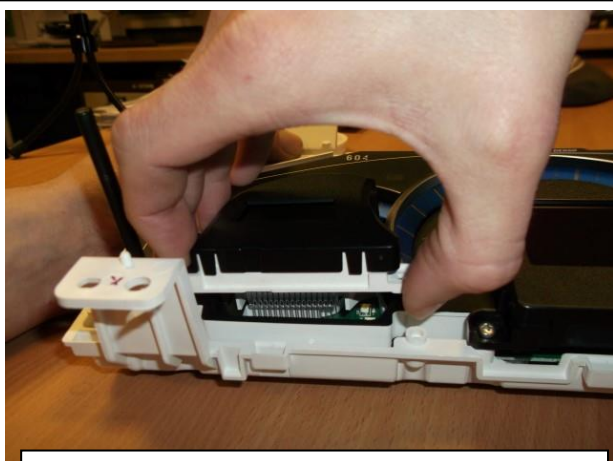


REPEAT REMOVAL OF LEFT HAND SCREEN

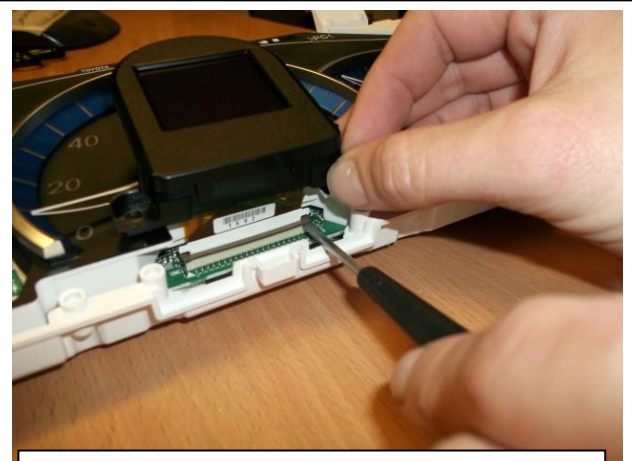


CAREFULLY DISCONNECT RIBBON CABLE



CAREFULLY DISCONNECT RIBBON CABLE

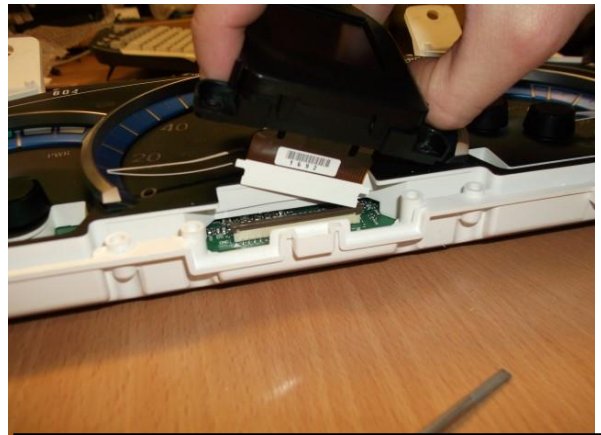

REMOVE CENTRAL DIGITAL SCREEN

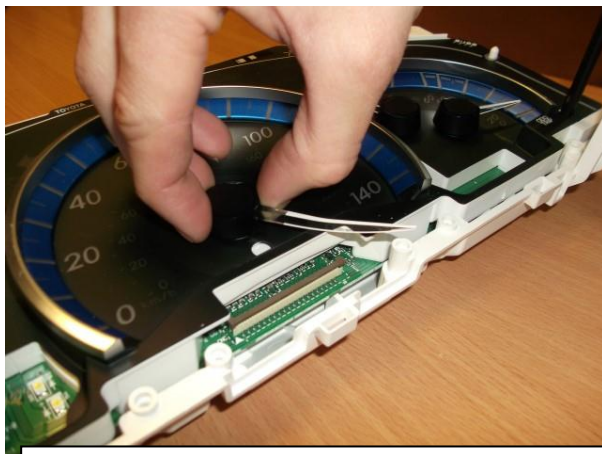


CAREFULLY REMOVE NEEDLE/POINTER



RELEASE PLASTIC COLLAR



RELEASE PLASTIC COLLAR FROM EACH
NEEDLE/POINTER LOCATION

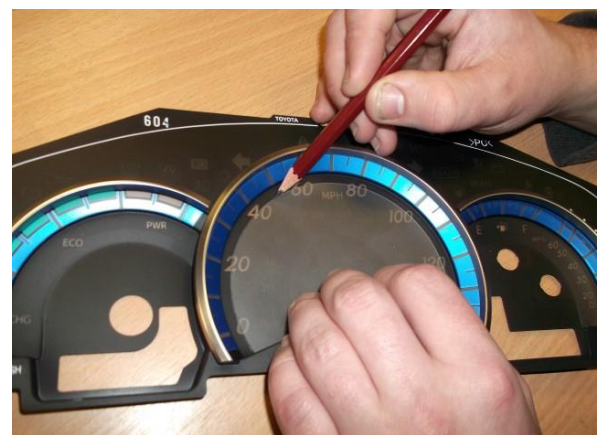

DRAW AROUND THE DIAL TEMPLATE



CAREFULLY CUT ALONG THE LINE



SPEEDO DIAL REMOVED



REPOSITION FASCIA ON CLUSTER BACK PLATE.
POSITION NEW DIAL IN PLACE AND REFIT
PLASTIC COLLARS.



RE-CONNECT SCREENS AND FRONT OF CLUSTER