


C1249 Honda C-RV Conversion Dial Fitting

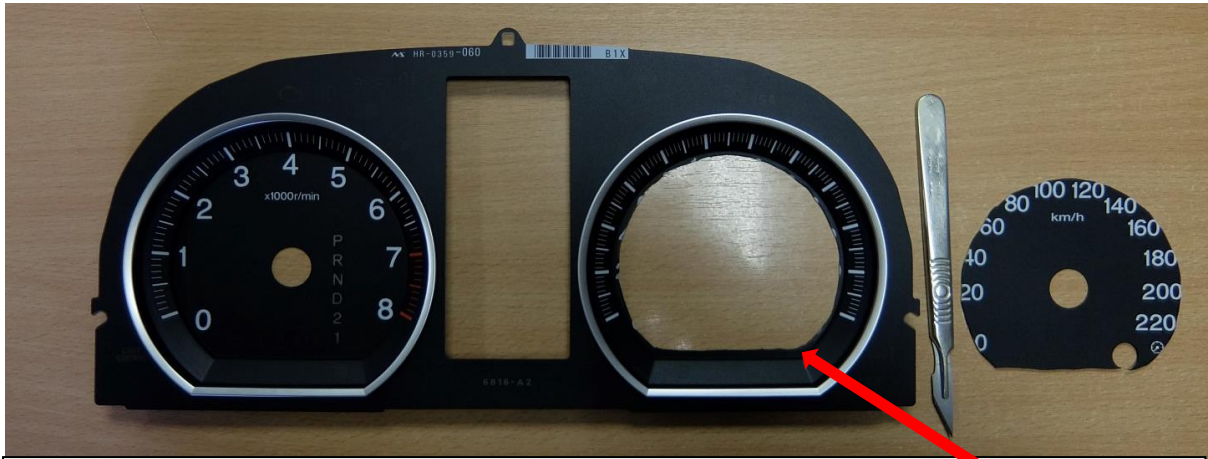

Carefully cut away the centre section of the original dial face leaving a small rim around the edge. This will support the replacement dial face in the next stage.



Next, apply a small amount of good quality **SOLVENT FREE GLUE** to the underside of the edge of the new dial to fix replacement in position.

It is important not to apply too much glue as it could leak out onto the front of the dial.

DO NOT USE SUPERGLUE or SOLVENT BASED GLUE AS THESE WILL CAUSE DAMAGE.