




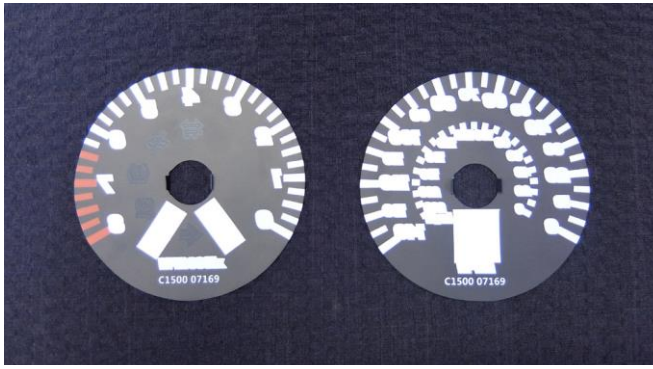


These dials come with paper backed adhesive on the inner dials. The outer dials don't require this adhesive.

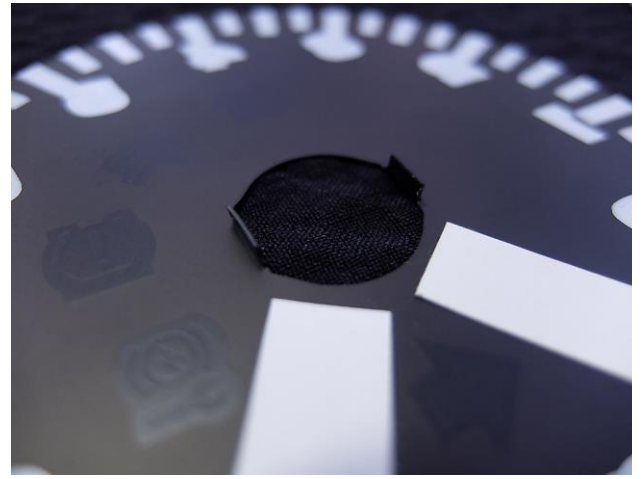

1: Note the small bent locating tabs on the back of both inner dials.

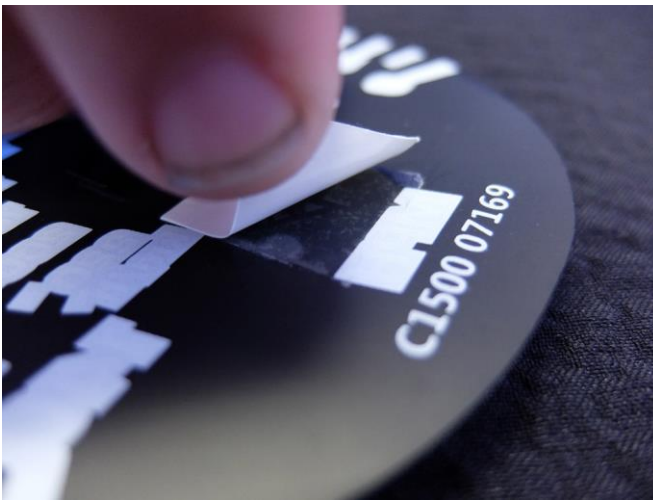

2: Peel off the paper backing from the adhesive.

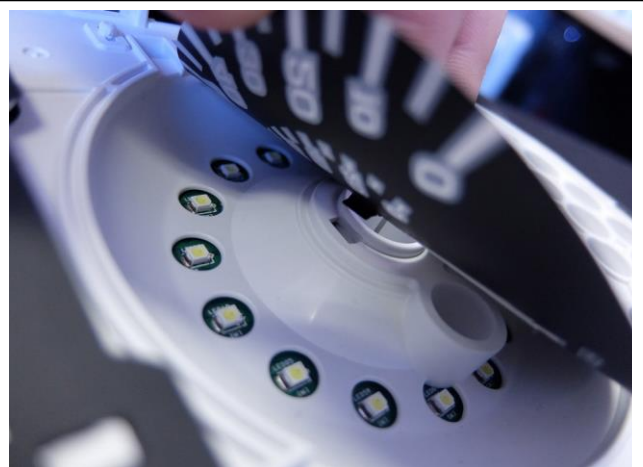

3: Fit the inner dials locating the tabs in the small holes / slots in the cluster (shown here).



4: With both inner dials fitted press down lightly where the adhesive is located to ensure good adhesion.



5: Fit the outer dial, note the 2 locating holes in the dial and position these on the locating pegs.



6: With the outer dials fitted clip the shroud / lens back on. You can now refit the cluster back into the car.