



Fitting Instruction for part number C1533 Hyundai IX55



1) Mark where shown. Leaving a 2mm 'lip' around perimeter

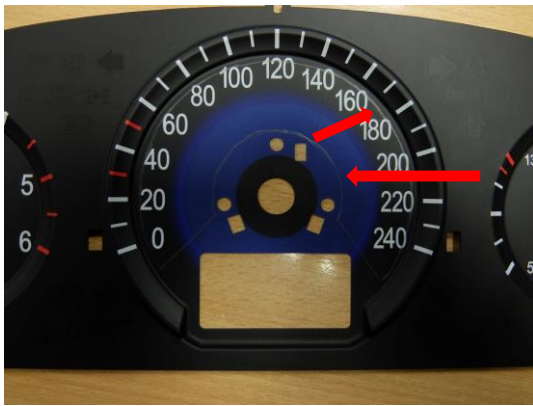

2) Use scalpel to cut out

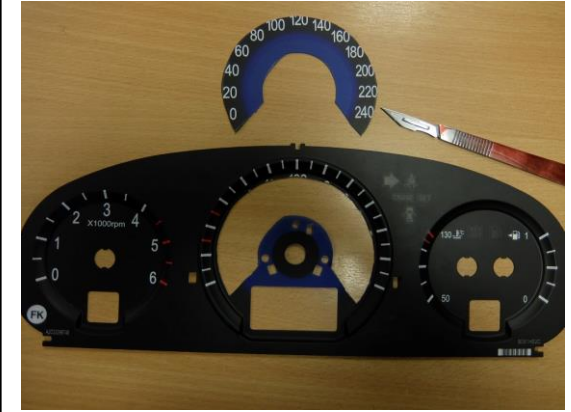


3) Dial cut out. Make sure that the 'lip' does not obscure the illumination of the small KM numbers on new dial, by placing new dial in position and hold in front of light. If needed trim the 'lip'



4) Use a good quality solvent free glue & place small glue dots around the centre as shown.....



5)and small glue dots around 'lip'

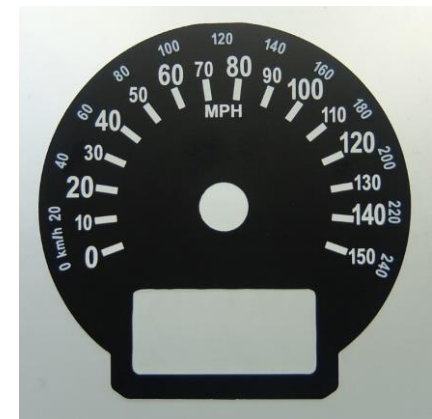

6) Stick the new face into position and leave glue to dry.



C1553 Fitted in position in cluster

No responsibility will be accepted by Lockwood International Ltd for any damage caused whilst, or as a result of fitting these dials.