






1: Using a craft knife cut out the original dial centre

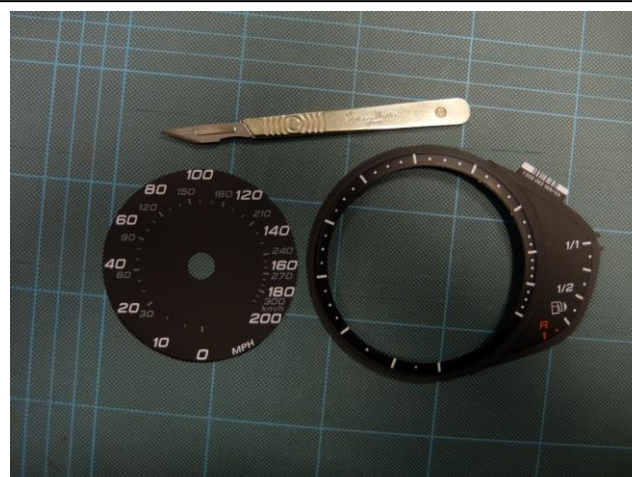


2: The dial centre now cut out

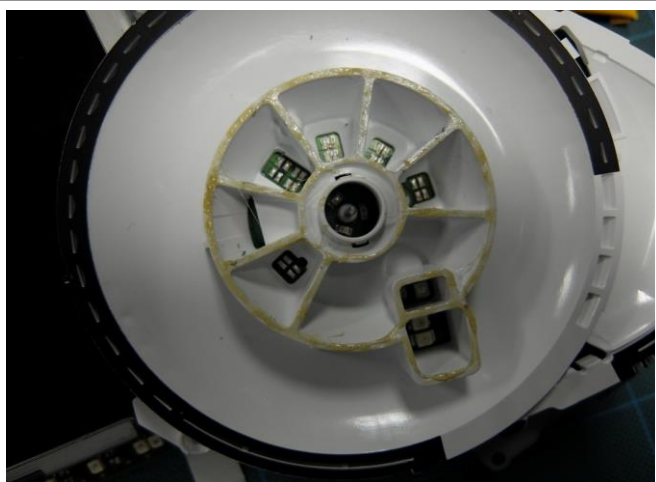

3: Apply solvent free glue as shown here. This glue **MUST** be solvent free.

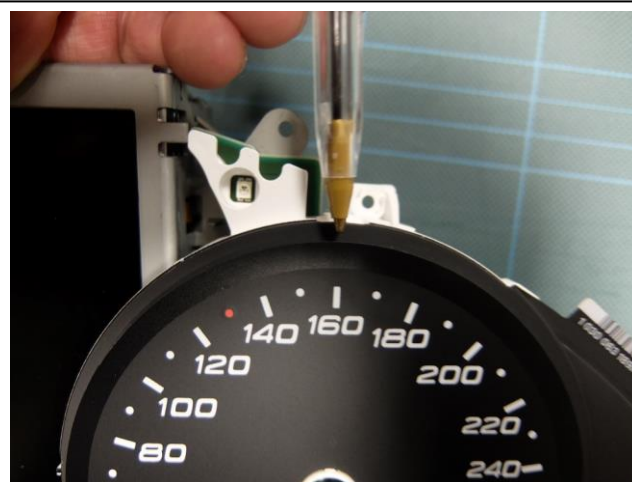

4: Line up the 100 MPH mark (underneath) with the 160 kmh mark.

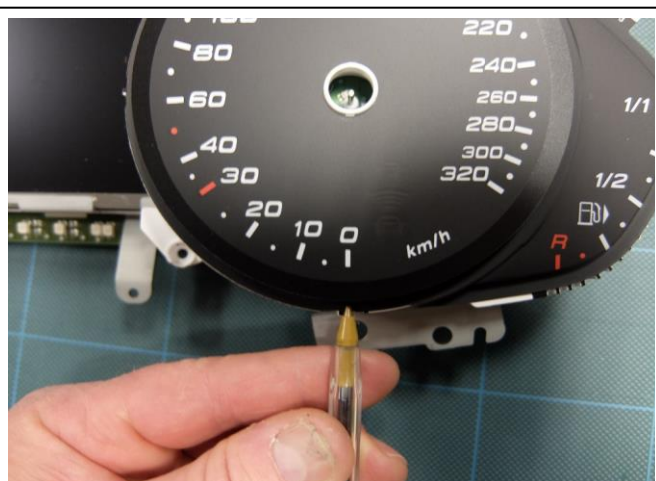

5: Line the 0 marks up. Clip the centre of the dial in and smooth the dial down to adhere to the glue.



Dial fitted into an Audi S6. The same principles are used to fit both the S6 and RS7.