



Instructions for fitting part number C1568 Conversion Dial into a Toyota Alphard




1) Unclip and remove silver ring from both dials

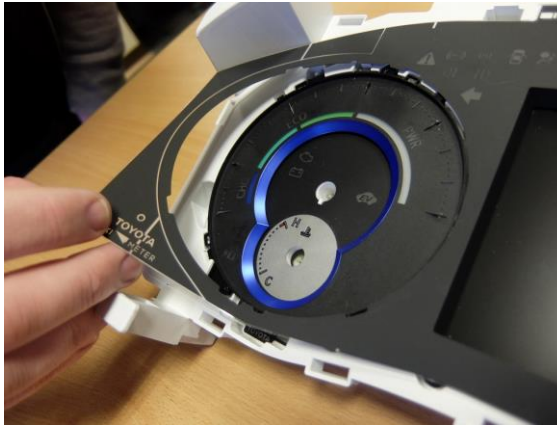

2) Remove outer fascia.

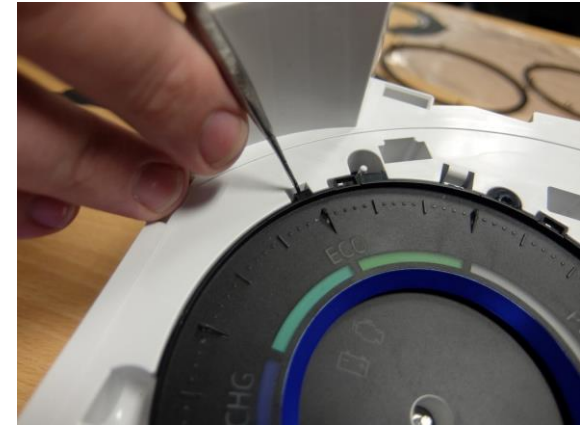

3) Carefully Unclip each dial face and

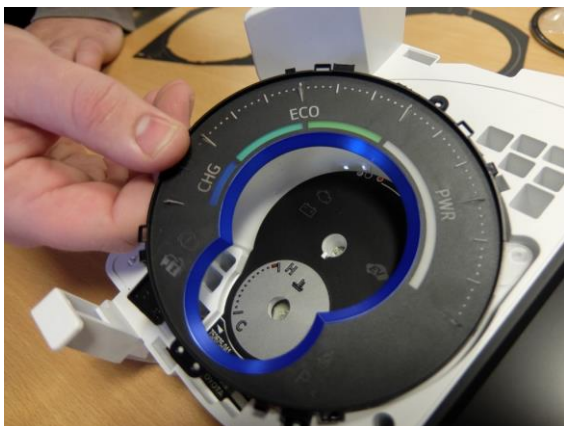


4) Remove them.



5) Gently press out the clips which hold the blue trim.....



6) and remove.

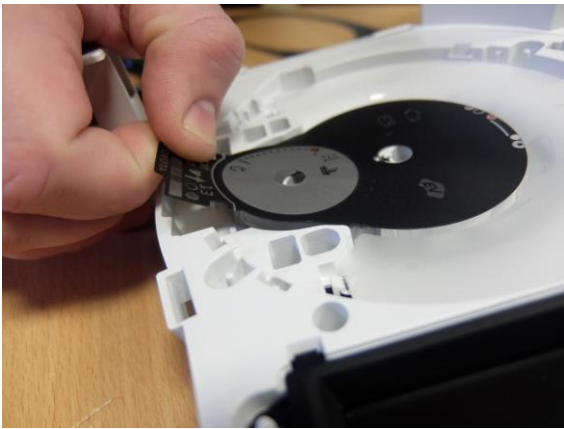

7) Remove the fuel and temperature gauge faces.




8) Position the blue trim on the new replacement fuel and temperature faces.



9) We recommend a solvent free glue (example above) for the following....




10) Apply a small amount of adhesive to the position shown here.

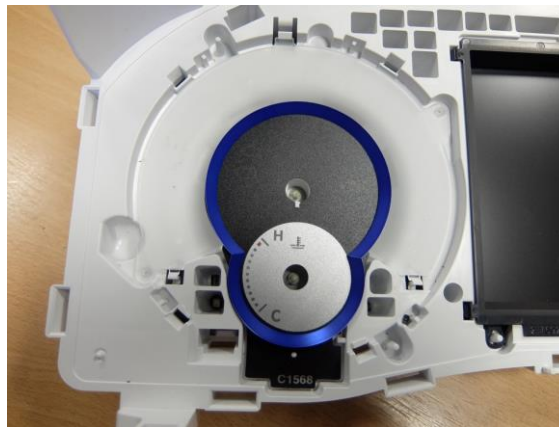


11) Position the temperature gauge as shown and repeat procedure with the fuel gauge.



12) Apply small beads of adhesive to the back of the charge/power gauge face taking care to avoid any numbers or markings.

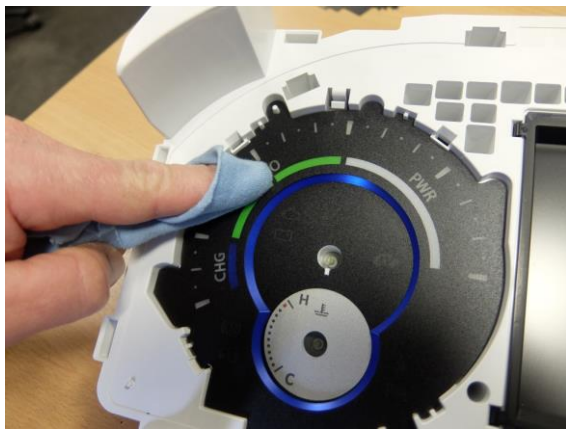

13) Position the face and smooth down with a soft clean cloth. Repeat procedure with the speedo face.

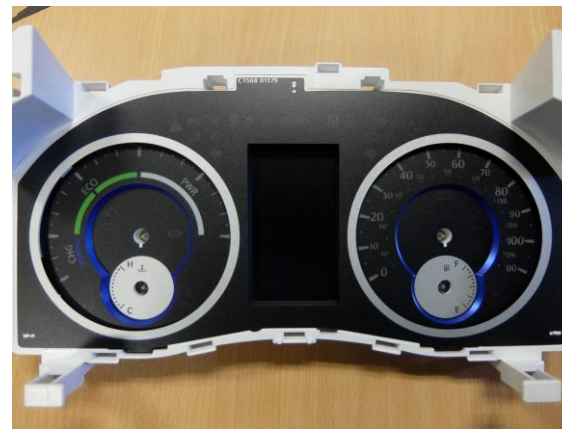

14) Position the outer fascia.



15) Replace the needle/pointers to their original positions and re-assemble the cluster.