




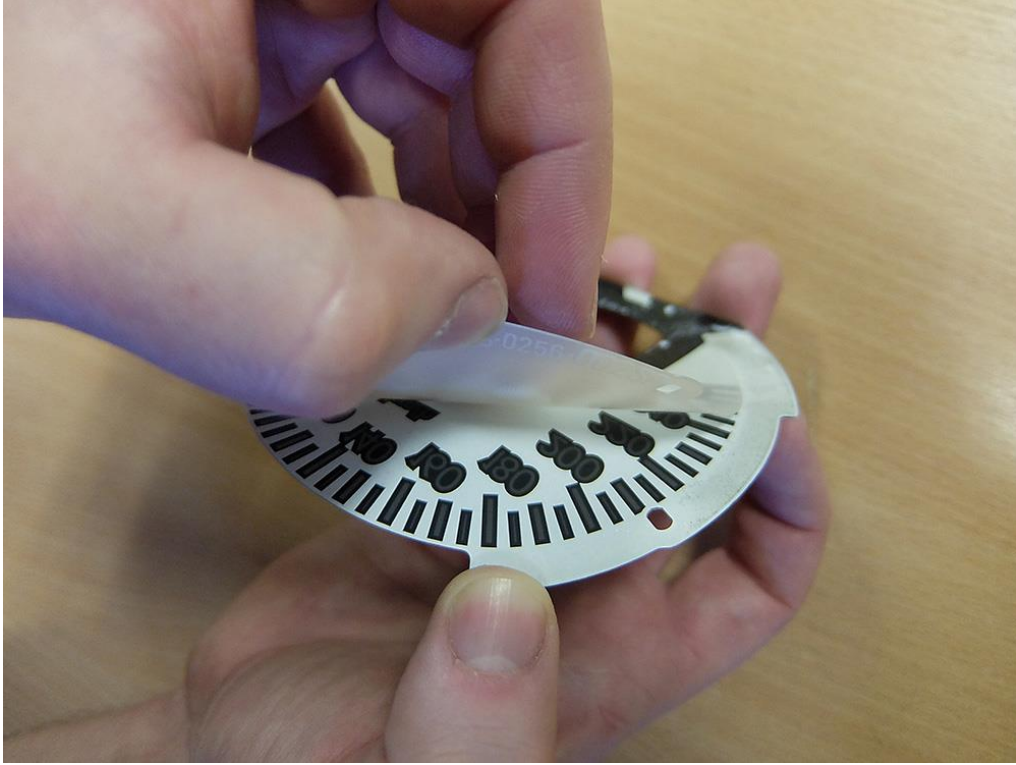

1: Peel the clear illumination diffuser from the back of your original dial.

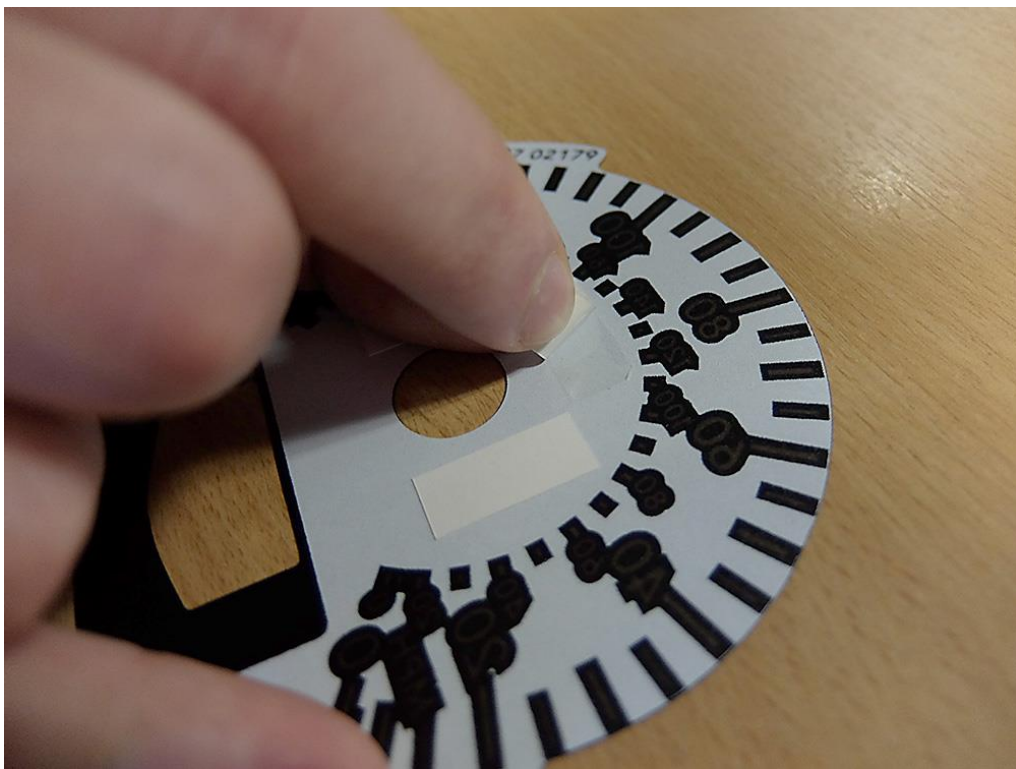

2: Peel the paper backing from the double sided adhesive.

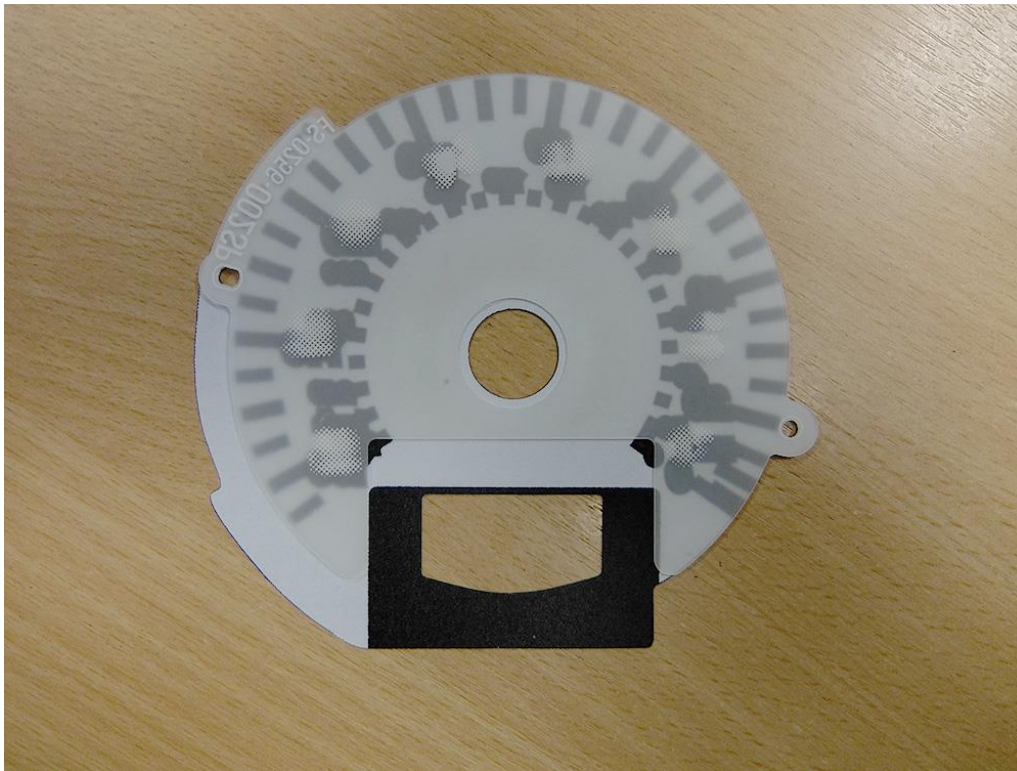

3: Stick the clear illumination diffuser onto the replacement dial. Use the 3 holes as a guide when doing this.